

## WHY CHOOSE UNITED STATES WARRANTY CORPORATION?

### 40 YEARS IN BUSINESS

Our staff has the training, experience and knowledge to ensure that your questions and requests will be handled in a highly professional and timely manner.

### WE CARE ABOUT YOU AND YOUR CUSTOMERS

Our claims adjusters are available 24/7 and go above and beyond to make sure you and your customers understand the service contract.

### WE ARE HERE TO ASSIST YOU

Our sales team is available 24/7 to assist you in the preparation of your applications and answer questions about eligibility requirements.

Customized quotes are also available.

This brochure is for promotional purposes only; it is not a contract. Ask your authorized USWC dealer for a complete copy of the actual service contract.

“SERVICE, INTEGRITY & TRUST”  
SINCE 1975

## UNITED STATES WARRANTY CORPORATION

6150 PARKLAND BLVD. SUITE 100  
MAYFIELD HEIGHTS, OH 44124  
(800) 233-9878  
FAX: (440) 516-2604

[INFO@USWCEAGLE.COM](mailto:INFO@USWCEAGLE.COM)

[WWW.USWCEAGLE.COM](http://WWW.USWCEAGLE.COM)

# UNITED STATES WARRANTY *Extended Service Protection* CORPORATION



## Commercial Vehicle Division

NATIONWIDE  
TOLL FREE/EMAIL  
CLAIMS ASSISTANCE  
(800) 233-9878  
[claims@uswceagle.com](mailto:claims@uswceagle.com)

**ENGINE:** Gasoline Engine: all internally lubricated engine parts and the cylinder heads, engine block, timing cover and the valve covers. External Engine parts: belt tensioners, dipstick, dipstick tube, engine water pump, flywheel/flexplate, flywheel ring gear, harmonic balancer, harmonic balancer pulley and the idler pulley. Diesel Engine: all of the above parts plus: cylinder sleeves/liners, fuel injectors, mechanical fuel injection pump and the turbocharger.

**AUTOMATIC TRANSMISSION:** All internally lubricated automatic transmission parts and the oil pan and the transmission case. External Automatic Transmission parts: dipstick, dipstick/oil fill tube and the oil cooler.

**DRIVE AXLE:** All internally lubricated drive axle parts and the drive axle housing.

**SEALS & GASKETS:** Seals & gaskets are covered only in conjunction with the repair or replacement of a covered part.

**BRAKES:** Backing plates, booster pump, combination valves, equalizer valve, hydroboost, hydrovac, master cylinder, power brake booster, power brake cylinder, rear actuators, self-adjusters, steel hydraulic brake lines, wheel cylinders and the vacuum assist booster. Air Brakes: air brake compressor, auto bleeder valve, compensating valve, diaphragm, governor, slack adjusters, tank and the treadle. Anti-lock brakes: anti-lock brake pump, electronic anti-lock brake actuator, electronic anti-lock brake computer and the hydraulic control unit. Parking Brake: cables and the linkage.

**DASH HEATING & AIR CONDITIONING:** Air Conditioning Components: 12-volt vacuum pump, accumulator, compressor, compressor clutch, condenser, condenser fan motor, evaporator, expansion valve, high/low cutoff switches, orifice tube, pressure cycling switch, receiver dryer, Schrader valve and the suction valve. Heater Components: air duct outlets, air ducts, blower motor, blower motor fan, dash heater core and the heater control valve.

**ELECTRICAL:** Alternator, battery isolator, brake light switch, coils, dual battery switch, front window wiper motor, hand operated driver control switches, horn, horn switch, ignition lock cylinder, ignition switch, power converter, programmable temperature control, turn signal switch, voltage regulator, volt gauge and the windshield washer pump. Air Horn: compressor and the horn. Back Up Alarm: audible device, relay and the switch. Cruise Control: engagement switch, relays, servo and the transducer. Power Door Locks: actuator, control switches and the solenoids. Power Mirrors: control switches and the motors. Power Windows: control switches, motors and the regulators. Starter: motor and the solenoid. The inverter and inverter control panel are covered on new vehicles only.

**ELECTRONIC HI-TECH:** Camshaft position sensor, coolant temperature sensor, crank position sensor, engine control module, intake air temperature sensor, head temperature sensor, knock sensor, manifold absolute pressure sensor, mass air flow sensor, phase sensor, throttle position sensor and the vane air flow sensor. Electronic Anti-Detonation: controller and the sensors.

**ENGINE COOLING:** Charge air cooler, coolant recovery tank, cooling fan clutch, electric block heater and the radiator. 12-Volt Cooling: control module, fan and the motor. Hydraulic Cooling: controller, fan, motor and the pump.

**FUEL SYSTEM: CNG/LNG:** Fuel manifold, gas injectors, hydraulic valves, injection pump, pressure regulators, relief valve, shut off valves and the turbo air bypass valve. Diesel: fuel heater, metal fuel lines, sending unit and the transfer pump. Gasoline: auxiliary tank switch, fuel injectors, fuel pressure regulator, fuel pressure tap, fuel tank, in-tank 12/24 fuel pump, metal fuel lines and the sending unit.

**STEERING:** Bell crank, center link, control valve, control cylinder, cooler, cooler lines, drag link, idler arm, intermediate shaft, main shaft, pitman arm, power steering cylinder, power steering pump, steering box and the steering damper.

**SUSPENSION:** Air suspension compressor, coil springs, control arm shafts, leaf springs, lower control arms, ride height sensors/valves, stabilizer shaft links, suspension airbag, sway bar, torsion bars and the upper control arms.

## OPTIONAL COVERAGE

**AUXILIARY AIR CONDITIONING:** Accumulator, blower motor, blower motor fan, condenser, evaporator, expansion valve, high/low cut off switches, orifice tube, receiver dryer, pressure cycling switch, Schrader valve and the suction valve. Compressor: clutch, compressor and the switch.

**AUXILIARY ALTERNATOR:** All internal parts.

**AUXILIARY HEATER:** Blower motor, heater core and the main control switch.

**PASSENGER ENTRY DOOR:** Electric motor, handle linkage, latch, locking device, operating handle, PC board, pneumatic actuator, relays and the switches.

**WHEEL CHAIR LIFT:** Actuator, electric motor, hydraulic motor, hydraulic pump, locking handrails, manual hand pump, PC board, power control switch, pressure release valve and the relays.

**FOUR WHEEL/ALL WHEEL DRIVE SYSTEM:** All internal transfer unit parts and the shafts and the transfer case.

**MOBILITY VAN PACKAGE:** Automatic Door: cables, latch, lock contacts, motor, optic sensor, lower track liner, PC board, pulleys, rear hinge and the solenoid. Enhanced Electrical: circuit breakers, delay switch, limit switches, power seat base, power wheelchair tie down, relays and the wiring harness. Enhanced Suspension: coil springs, leaf springs, leaf spring shackles, load assist shocks, load assist springs, pannard bar, suspension bumpers and the track bar. Kneel System: actuator, actuator chain, air compressor, control switches, height sensors, height valves, limit switches, PC board, relays and the roller. Ramp System: actuator, control switch, drive screws, gate latch, gears, lift arm, limit switches, mag switch, motor, optic sensor, PC board, pulleys, ramp bearing, ramp cables, ramp hinge, ramp motor and the timing belt. Lift System: clutch, control switches, cylinders, hydraulic pump, hydraulic hoses, limit switches, motor, PC board and the solenoid.

