

## KEEPING YOUR DREAMS AFLOAT!

COMPONENT	AVERAGE REPAIR
REFRIGERATOR	\$450 - \$2,200
AIR CONDITIONER	\$500 - \$2,000
JET DRIVE	\$800 - \$2,500
AUXILIARY GENERATOR	\$500 - \$5,000
WATER HEATER	\$250 - \$1,500
FURNACE	\$275 - \$900
ALTERNATOR	\$500 - \$1,500
FUEL PUMP	\$800 - \$5,000
ENGINE	\$3,500 - \$40,000
FISH/DEPTH FINDER	\$400 - \$1,000
TROLLING MOTOR	\$300 - \$1,000
INVERTER	\$500 - \$2,900



### BENEFITS

- ANCHOR **SENIOR CITIZEN/MILITARY ADVANTAGE:** 25% reduction of your deductible.
- ANCHOR **DEDUCTIBLE REDUCTION:** A 50% reduction of your deductible for repairs being performed at dealer/seller.
- ANCHOR **EMERGENCY ROADSIDE/SEASIDE ASSISTANCE:** Up to \$300 for battery jump, flat tire change/repair, fluid delivery, lost key/locksmith/lockout.
- ANCHOR **EMERGENCY SERVICE CALLS:** Up to \$125 per occurrence.
- ANCHOR **HOIST / LIFT OUT ASSISTANCE:** Up to \$300 for covered repairs.
- ANCHOR **TOWING:** Non-accident towing up to \$300 for your watercraft, tow vehicle or trailer.
- ANCHOR **TRIP INTERRUPTION:** \$150 per day, up to 3 days.

### WHY CHOOSE UNITED STATES WARRANTY CORPORATION?

#### 40+ YEARS IN BUSINESS

- Highly experienced, professional staff.
- Questions & requests are handled in a timely manner.

#### COMPETITIVE COVERAGE

- 3 different plans with competitive pricing to fit your needs.
- Policies often pay for themselves in just one or two claims.
- Selling your watercraft? Your watercraft contract is cancellable and transferable.

#### WE CARE ABOUT OUR CUSTOMERS

- Claims adjusters are available 24/7.
- Service approved at any repair facility in the U.S. or Canada.
- 60-Day money back guarantee.

This brochure is for promotional purposes only; it is not a contract.

Ask your authorized USWC dealer for a complete copy of the actual service contract.

Not associated with United States Warranty Corp. of Florida

# UNITED STATES WARRANTY Extended Service Protection CORPORATION



"SERVICE, INTEGRITY & TRUST"  
SINCE 1975

### UNITED STATES WARRANTY CORPORATION

6150 PARKLAND BLVD. SUITE 200  
MAYFIELD HEIGHTS, OH 44124  
(800) 233-9878  
FAX: (440) 516-2604

MARINESALES@USWCEAGLE.COM  
WWW.USWCEAGLE.COM

### Marine Division

Cruisers  
Fishing Boats  
House Boats  
Pontoon Boats  
Ski Boats  
And More ...

## PLAN: EAGLE

**ENGINE ONLY: #1 & 25**

**POWERTRAIN ONLY: #1 - 5 & 25**

**FULL: #1 - 25**

**ENGINE DELETE: #2 - 25**

**CRAFT ONLY: #1 - 14 & 25**

**CABIN ONLY: #15 - 25**

**1. ENGINE COMPONENTS: Gasoline Engine:** all internally lubricated engine parts and the cylinder heads, engine block, intake manifold, oil pan, timing cover and the valve covers. **External Engine Parts:** dipstick, dipstick tube, engine cushions, engine mounts, engine water pump, flywheel/flexplate, flywheel ring gear, harmonic balancers and the harmonic balancer pulley. Exhaust manifolds and the exhaust risers are covered on new watercraft only. **Diesel Engine Parts:** all of the above parts and the cylinder sleeves/liners, fuel injectors, mechanical injection pump, turbocharger and the wastegate actuator.

**2. TRANSMISSION COMPONENTS:** all internally lubricated automatic transmission parts, the oil pan and the transmission case. **External Automatic Transmission Parts:** dipstick, oil fill tube, oil cooler, oil cooler lines and the transmission mounts.

**3. V-DRIVE/STERN DRIVE/LOWER UNIT COMPONENTS:** all internally lubricated parts and the drive housing/gear case.

**4. JET DRIVE COMPONENTS:** all internal jet pump parts and the jet pump housing.

**5. INTERMEDIATE HOUSING COMPONENTS:** bearings, center yoke, drive yoke, engine coupler, intermediate housing, gimbal housing, steering yoke and the universal joints.

**6. ANCHOR COMPONENTS:** control panel, electric motor and the winch.

**7. DRIVER SHIFT/THROTTLE CONTROL COMPONENTS (Single or Dual Station):** bushings, cables, cams, control arms, control levers and the eccentrics.

**8. ELECTRONIC HI-TECH COMPONENTS:** camshaft position sensor, coolant/water temperature sensor, crank position sensor, electronic anti-detonation controller, electronic anti-detonation sensors, electronic driver information display, electronic driver information display module, engine electronic control module, engine temperature sending unit, fuel injection control module, intake air temperature sensor, head temperature sensor, knock sensor, manifold absolute pressure sensor, mass air flow sensor, phase sensor, speed sensor, throttle position sensor, transmission temperature sensor and the vane air flow sensor.

**9. ELECTRICAL COMPONENTS:** air horn compressor, alternator, battery charger, battery disconnect switch, battery isolator, bilge blower, bilge pumps, bilge pump controls, clockspring, coils, distributor, dual battery paralleling switch, engine temperature gauge, fuel gauge, fuse block, hand operated driver control switches, horn, horn switch, ignition switch, ignition switch cylinder, ignition trigger, odometer, oil pressure gauge, oil pressure sending unit, power driver seat motor, radio antenna motor, relays, solenoids, speedometer, starter, tachometer, transmission temperature gauge, trim gauge, turn signal switch, voltage regulator, volt gauge, window defroster, window wiper motor and the windshield washer pump.

**10. ENGINE COOLING COMPONENTS:** engine water pump and the heat exchangers. The intercooler/charge air cooler are covered on new watercraft only.

**11. FUEL SYSTEM COMPONENTS: Diesel Parts:** fuel heater, fuel tank, fuel transfer pump, metal fittings, metal fuel lines and the sending unit. **Gasoline Parts:** fuel injectors, fuel pressure regulator, fuel pressure tap, fuel tank, fuel pump, metal fittings, metal fuel lines and the sending unit.

**12. OIL INJECTION COMPONENTS:** check valves, injection lines, injection pump, pump drive gear and the reservoir.

**13. POWER STEERING COMPONENTS (Single or Dual Station):** control joystick, control rack, drag links, flow valves, helm assembly, hull thrusters, power steering cylinder, power steering hoses, power steering pump, pressure relief valve, reservoir, steering column, steering head, steering wheel, tie bar and the yoke assembly.

**14. POWER TRIM COMPONENTS:** electric motors, cylinder rams, cylinder mounts, cylinder pivots, trim control switches, control valve, pump, reverse lock valve and the trim cylinders.

**15. AIR CONDITIONING/HEAT PUMP/VENTILATION COMPONENTS:** accumulator, blower motor, blower motor fan, blower motor wheel, ceiling vent fans, compressor, condenser, ducts, duct work, electronic module, evaporator, expansion valve, heat strips, high/low cut off switches, pressure cycling switch, printed circuit board, receiver drier, relays, reversing valve, run capacitors, Schrader valve, start capacitors and the thermostat.

**16. AUXILIARY GENERATOR COMPONENTS: Gasoline/L.P. Parts:** all internally lubricated engine parts and the cylinder heads, engine block and the valve covers. **Diesel Parts:** same as Gasoline/L.P. Auxiliary Generator parts plus the mechanical fuel injection pump, radiator and the water pump.

**Electrical Parts:** alternator, electric fuel pump, gauges, hour meter, inverter controller, manually operated switches, printed circuit board, rotor, starter, starter solenoid, stator and the voltage regulator.

**17. CABIN ELECTRICAL AND SHORE POWER COMPONENTS:** inverter, inverter control panel, LED lighting, light fixtures, light switches, onboard shore-power receptacle, power converter, safety lights, solar panels, spot lights and the transfer switch.

**18. L.P. SYSTEM COMPONENTS (Factory or Dealer Installed Only):** automatic shut off, detectors, fittings, gauges, L.P. lines, L.P. tanks, pigtailed, regulators and the valves.

**19. NON-HYDROSTATIC L.P. AND ELECTRIC FURNACE COMPONENTS:** blower motor, blower motor fan, blower motor wheel, burner assembly, ducts, duct work, fittings, gas valve, igniter, limit switch, printed circuit board, sail switch, thermocouple and the thermostat.

**20. NON-HYDROSTATIC L.P. AND ELECTRIC WATER HEATER COMPONENTS (Factory or Dealer Installed Only):** burner assembly, control panel, control switches, fittings, gas valve, heating element, igniter, pressure relief valve, printed circuit board, tank, thermocouple and the thermostat.

**21. RANGE/OVEN COMPONENTS:** burner assembly, burner valves, fittings, heating element, igniter, microwave convection oven, microwave oven, power hood fan, power hood fan motor, power hood fan switch, printed circuit board, thermocouple and the thermostat.

**22. REFRIGERATOR COMPONENTS:** burner assembly, compressor, condenser, cooling unit, evaporator, expansion valve, fan, fittings, heating element, igniter, printed circuit board, thermocouple and the thermostat.

**23. WASTE SYSTEM COMPONENTS:** ball valves, fittings, gate valves, holding tanks, holding tank flush valves, interior drain lines, macerator pump, non-powered slide valves, non-powered toilet, traps and the water inlet valves. **Electric Toilet:** controller, flush control switch, printed circuit board, pump motor, vacuum pump, water solenoid valve and the wiring harness.

**24. WATER SYSTEM COMPONENTS:** ball valves, check valves, fittings, gate valves, holding tanks, interior supply lines, shower faucet, shower head, sink faucets, traps, water inlet valves, water manifold and the water pump.

**25. SEALS & GASKETS COMPONENTS:** seals & gaskets on parts which prevent the loss of fluids or refrigerants. Fluid seals must be leaking to an active drip.

**OPTIONAL COVERAGE FOR PLAN: EAGLE**  
**(The coverage below is included with Plan: Eagle Plus, unless otherwise noted)**

**26. AUDIO/VIDEO COMPONENTS (Factory or Dealer Installed Only):** AM/FM/satellite stereo, CB radio, component CD/DVD player, driver observation cameras, driver observation monitors, LCD television/monitor (up to 50") and the emergency communication radio.

**27. BAIT/LIVE WELL COMPONENTS (Factory or Dealer Installed Only):** pumps, switches and the valves.

**28. DELUXE APPLIANCE COMPONENTS:** blender, carbon monoxide detector, central vacuum cleaning system, clothes dryer, clothes washer, dishwasher, external barbecue, food processor, freezer, gas fume detector, ice maker, in-sink disposal, smoke detector and the trash compactor.

**29. DEPTH FINDER/FISH FINDER COMPONENTS (Factory or Dealer Installed Only):** control panel, control switches, monitor, power supply, sensors and the transducers.

**30. ELECTRIC TROLLING MOTOR COMPONENTS:** controls and the electric motor.

**31. HYDROSTATIC FURNACE COMPONENTS:** air accumulator, compressor, control box, fan motor, fan motor bearings, fuel pressure regulator, fuel pump, heat exchanger, heating element, hour meter, igniter, L.P. solenoid, L.P. valve, main control switch, printed circuit board, tempering valve, thermostat and the water pump.

**32. TRAILER COMPONENTS:** axle bearings, axles, brackets, bunks, couplers, hubs, roller cradles, spindles, spring hangers, suspension springs, winch and the winch stand. **Trailer Brakes:** actuators, backing plates and the master cylinder.

**33. ULTRA ELECTRONIC HI-TECH COMPONENTS: Cruise Control:** actuators, servos, switches and the transducers. **Electronic Entrance:** actuators, printed circuit board, servos, solenoids, touchpad and the transmitter. **Compass, Global Positioning System and the Thermometer.**

**34. WEAR AND TEAR COMPONENTS (Engine, Transmission and Drive Components. Not available on Engine Only, Cabin Only or Engine Delete):** wear and tear breakdown will be deemed to have occurred when a covered part has worn beyond the manufacturer's tolerances allowed for the particular part.

**35. SATELLITE SYSTEM COMPONENTS:** All parts of the satellite system except wiring.

**36. CONSEQUENTIAL DAMAGE:** coverage for the following parts if damaged due to an authorized breakdown: batteries, belts, exhaust and emission systems, filters, fuses, glass lenses, hoses, light bulbs, safety restraint systems, sealed beams, spark plugs, spark plug wires, intelligent cruise control systems and the wiper blades. (Not included in Plan: Eagle Plus or Plan: Eagle Guardian, unless this option is purchased.)

## PLAN: EAGLE PLUS

**FULL: #1 - 35**

**ENGINE DELETE: #2 - 35**

**CABIN ONLY: #15 - 35**

This plan includes select coverage and options #26-35 contained in Plan: Eagle. Only listed parts are covered. Please note that option #36 Consequential Damage is not included in Plan: Eagle Plus and must be purchased separately.

## PLAN: EAGLE GUARDIAN

**FULL**

**ENGINE DELETE:** does not provide coverage for #1 Engine Components.

This plan is our most comprehensive exclusionary coverage. Plan: Eagle Guardian provides coverage for virtually all factory approved and factory or dealer installed electrical, electronic, hydraulic and/or mechanical parts essential to the operation of your watercraft. Please note that option #36 Consequential Damage is not included in Plan: Eagle Guardian and must be purchased separately.

Please refer to your service contract booklet for complete details of the coverage, limitations and exclusions of your agreement.

